

What to do if...
What to do if...



A tire punctures

P. 580 If you have a flat tire



The engine does not start

P. 588 If the engine will not start

P. 64 Engine immobilizer system

P. 597 If the battery is discharged



The shift lever cannot be moved out

P. 590 If the shift lever cannot be shifted from P



The engine coolant temperature gauge enters the red zone

P. 600 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 593 If you lose your keys



The battery runs out

P. 597 If the battery is discharged



The doors cannot be locked

P. 22 Doors



The horn begins to sound

P. 66 Alarm



The vehicle is stuck in mud or sand

P. 603 If the vehicle becomes stuck



A warning light or indicator light comes on

P. 570

If a warning light turns on



■ Warning lights



Brake system warning light (red indicator)

or



P. 570



Malfunction indicator lamp

or



P. 571



"ABS" warning light

or



P. 571



Driver's seat belt reminder light

P. 572



Front passenger's seat belt reminder light

P. 572



Brake system warning light (yellow indicator)

P. 571



Master warning light with warning message

P. 572



Low fuel level warning light

P. 572



Electric power steering warning light

P. 571



SRS warning light

P. 571



Pre-collision system warning light

P. 571



Open door warning light

P. 572



Tire pressure warning light

P. 572



Charging system warning light

P. 570